## IPV54

# **User Guide**



## IPV54

## **User Guide**

#### Make a Call

- 1. Pick up the handset.
- 2. Enter a number, and then press the Call soft key.

#### Make a Call with a Headset

- Plug in headset and make sure the icon displays on the screen.
- 2. Press **Headset** (2) button.
- 3. Enter a number using the keypad and then press the **Call** soft key or the Headset **Q** button

## Make a Call with the Speakerphone

- 1. Press **Speakerphone**
- 2. Enter a number, and then press the Call soft key.

## **Answer a Call**

Pick up the handset or if you are using the **speakerphone**, press button or **Call** soft key.

#### **Put a Call on Hold**

Press or the **Hold** soft key during an active call. To resume a held call, press button or the **Resume** soft key.

#### **View Your Recent Calls**

- 1. Press the **Call log** soft key when the phone is idle, press ( ) or ( ) button to or scroll through the list.
- 2. Select an entry from the list, and use the **Call** soft key to place the call.
- Press the **Delete** soft key to delete the entry from the list.

#### **Transfer a Call to Another Person**

- 1. From a call that is not on hold, press (-() button or the **Transfer** soft key.
- 2. Enter the other person's phone number or press users **BLF** soft key if you that feature enabled.

#### **Add Another Person to a Call**

- From a connected call that is not on hold, press the Conference soft key.
- 2. Enter the number of the second party, and then press the **Call** soft key.
- 3. Press the **Conference** soft key again when the second party answers. All parties are now joined in the conference.

#### **Mute Your Audio**

- 1. Press Mute 🕢 button.
- 2. Press Mute button again to turn mute off.

## **Listen to Your Voice Messages**

The Message Waiting Indicator on the idle screen indicates that you have new voice messages waiting. The power indicator LED slow flashes red.

To listen to voice mail messages:

- 1. Press 🖾 or dail \*123
- 2. Follow the voice prompts to listen to your voice messages and enter your pin.

## **Call Forwarding**

Press • to enable predefined call forward
Press • to disable call forward

## Adjust the Volume in a Call

Press **Volume** • left or right to adjust the handset, headset, or speakerphone volume, during a call.

## **Adjust the Ringtone Volume**

Press **Volume** • left or right to adjust the ringer volume when the phone is not in use.

## **Change the Ringtone**

- Press the Menu soft key when the phone is idle, and then select Basic > Sound > Ring Tones.
- 2. Press ( ) or ( ) to select. the desired ring tone.
- 3. Press the Save soft key to accept the change.

## **Call Pickup**

Lift Handset and press Call Pickup softkey, or dial \*88.

## **Do Not Disturb mode**

To enable **DO NOT DISTURB** press the **DND soft** key.

## **External Directory**

- 1. Press the **Directory** soft key
- 2. Use and buttons to scroll through the list
- 3. Select an entry fom the list and use the **Call** soft key to place the call.